

## JPI ENGINE MONITOR

### AFTER START AND SELF TEST:

If no fuel added: push left button to accept

If full fuel added: push right then left button

If partial fuel added: Push right button twice (+)

Then push left button once. Hold right to

add fuel, tap right to decrease fuel, push

left button to accept

### TOGGLE SWITCH:

In down position, press left button to "GPH"

In up position, push left button to "MP RPM"

In center position - monitor cyl #5 for temps.