START

SIANI	
PM	PF
Batteries	ON/VOLTS CHK
Park Brake	SET
Cabin Door	2 FWD LT OUT
AC Aux Ht. Galley Pwr	OFF
Inverters	ON/VOLTS CHK
Beacon	ON
1 ST Engine	START
Generator	ON/CHECKED
Flaps	30 DEGREES
Spoileron/Spoilers	CHECKED
Flaps	8 DEGREES
2 nd Engine	START
Generator	ON/CHECKED
Avionics Master	ON
Current Limiters	CHECKED
Fuel Control Governors	CHECK
Avionics	ON
Standby Gyro	ON/UNCAGED
Radar	STBY
Smoking Seat Belt Sign	ON
Gyro Flags	OFF
Parking Brake	RELEASE / TAXI

TAXI

PM	PF	
Brakes and	CHECKED	
Steering		
Flight Controls	CHECKED	
Anti-Skid	CHECKED	
Spoilers, Flaps Trim	RET. SET CHKD	
Flt /Nav Instruments	SET & CHECKED	
Altimeters	SET	
Bugs, V Speeds	SET	
Bleed Air & Press.	ON & CHECKED	
Hold 2 nd Engine Start		
Cab Temp Controls	SET	
Generators	ON	
Windshield Heat	CHKD/PURGD/OFF	
Circuit Breakers	CHECKED	
Engine Instruments	NORMAL	
Radar/Avionics	STANDBY/ON	
Fuel Panel	CHKD/BALANCED	
Belts & Harnesses	FASTENED	
Crew Briefing	COMPLETED	

LEAR 35A N325NW Checklist

LINE UP CHECK

22 0. 020	
PM	PM
Transponder	ON
Anti-Ice	AS REQ'D
Lights	ON
Hold Line	
Pitot Heat	ON
Stall Warnings	ON
Air Ignition	ON
Radar Altimeter	ON
Bleed Air &	ON
Press.	
Warning Lights	OUT

AFTER TAKEOFF

PM	PM
Landing Gear	UP
Yaw Damper	ON
Flaps	UP
Air Ignition	OFF
Landing Lights	OFF
Pressurization	MONTIOR
Anti-Ice	ON/OFF
Angle of Attack	CHECKED

CLIMB (10,000 MSL)

PM	PF
Recognition Light	OFF

CLIMB (FL 180)

022 (. 2 .00)	
PM	PF
Altimeters	29.92
Pressurization	MONITOR
Air Conditioner	OFF
Oxygen Pressure	CHECKED
Seat Belt / No	AS REQ
Smoking Sign	

PF=Pilot Flying PM=Pilot Monitoring

CRUISE

PM	PF
Pressurization	MONITOR
Fuel Panel	MONITOR
Engine Instruments	MONITOR
Cabin Temp	SET
Controls	
Other Systems	MONITOR

DESCENT

PM	PF
Windshield Heat	ON
Anti-Ice	ON/OFF
Pressurization	LANDING
	ELEVATION

APPROACH (FL 180)

PM	PF
Crew Briefing	COMPLETED
Altimeters	SET
Bugs & V -Speeds	SET
Lights	ON
Fuel Balance	CHECKED
Circuit Breakers	CHECKED
Hydraulic Emer Air	CHECKED
Seat Belt No Smoking Sign	ON
Radar Altimeter	ON
Air Conditioner	ON
FLT NAV Instruments	SET & CHECKED

BEFORE LANDING

PM	PF
Spoilers	RETRACTED
Landing Gear	DOWN
Landing Lights	ON
Parking Brake	OFF
Hydraulic Pressure	CHECKED
Anti-Skid	CHECKED-ON
Flaps	LAND
Air Ignition	ON
Engine Syncs	OFF
Yaw Damper	OFF

AFTER LANDING

AFIER	LANDING
PM	PF
Ignition	OFF
Stall Warning	OFF
Landing / Taxi Lights	TAXI OR OFF
Recog / Strobe Lights	OFF
Spoilers/Flaps/Trim	RETRACTED/ UP/RESET
Radar and	OFF
Unnecessary	
Avionics	
Radar Altimeter	OFF
Pitot Heat & Anti-Ice	OFF
Emergency Power	OFF
Cabin Bleed / H-	CLOSED
Valve	
Hydraulic Pressure	CHECKED
Fuel Transfer	AS REQ
Galley Power	OFF

SHUTDOWN

PM	PM
Chocks or Parking	SET
Brake	
Windshield Heat and	OFF
Anti-ice	
Standby gyro	OFF/CAGED
Flight time	RECORDED
Panel Switches and	OFF
Avionics	
Thrust Levers	CUTOFF
Cross Flow Valve	CLOSED
Fuel Transfer	OFF / CLOSED
Fuselage valve	
Hydraulic pump	OFF
Inverters and	OFF
Generators	
Beacon/Nav Lights	OFF
Oxygen hoses	DISCONNECT
Batteries	OFF
Controls	LOCK
Entry Lights	OFF