

PA28RT-201 Profiles (Tru-Trak Autopilot)

Filename: Tru_Truk.doc 6/27/2024

SYNC (Before Engaging):

- 1- Switch A/P On
- 2- Presses and release the **ALT** button **TWICE**.
- 3- Rotate the KNOB to set the altimeter to the aircraft altimeter reading then momentarily press and release the KNOB.

ENGAGE: The autopilot can be engaged in one of two ways:

- 1) Using the **AP LEVEL** button. **Blue Button**
- 2) Momentarily press and release the **KNOB** on the autopilot face; Ground track and vertical speed.

NAV:

Press **MODE**.

VS:

Press then rotate **KNOB**.

ALT HOLD:

Press **ALT** then press **KNOB**.

ALT SELECT:

Press **ALT**, rotate **KNOB**, press **KNOB**, select VS press **KNOB**.

ADJUST VERTICAL SPEED and ALTITUDE:

Press **KNOB Once (VS) Twice (SEL altitude)**.

ALTITUDE PRE-SELECT MODE:

Autopilot **Disengaged**, press **ALT** rotate **KNOB** to select the target altitude, press and release **KNOB**.